




Template Stock Number: Emtek PDTS

Installation Instructions: Emtek Pocket Door Hardware

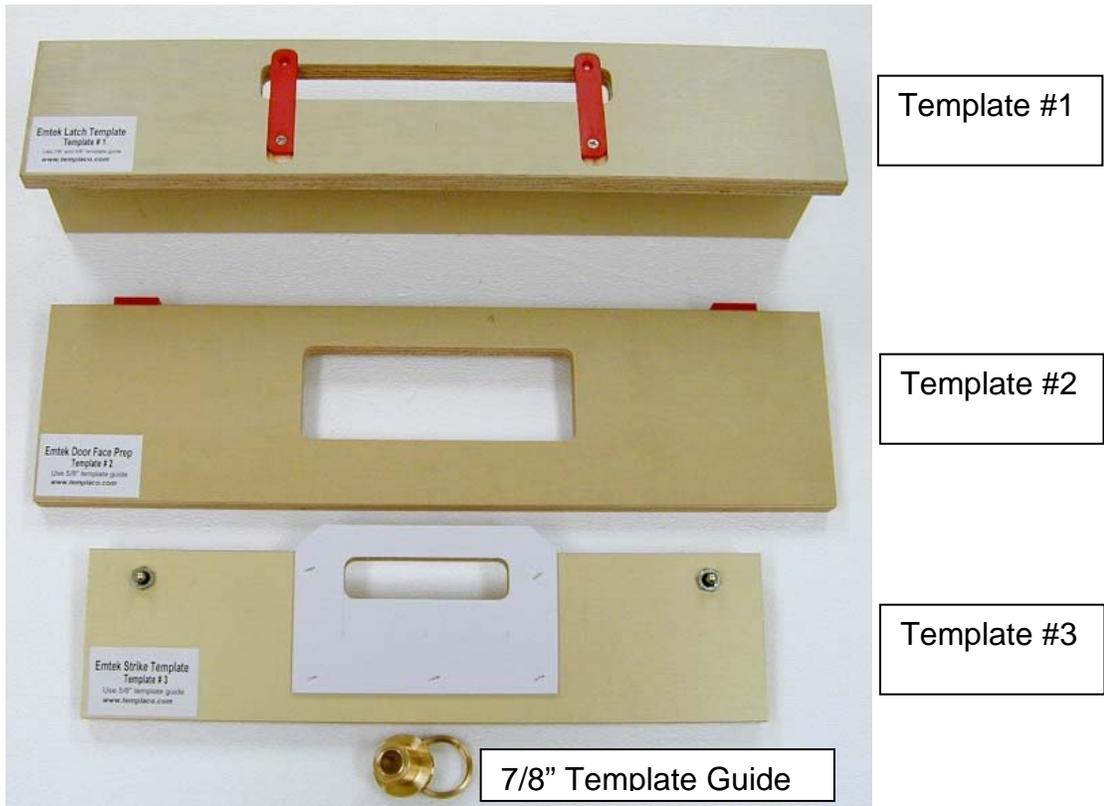

Install the Emtek Pocket Door latch and strike hardware using this three template set and special 7/8" OD template guide. Template #1 is a clamp-on style template and will produce the latch mortise of 5/8" x 6-1/4" for the deep mortise using your 1/2" router bit (a long bit is required here) with the special 7/8" template guide and will also produce the finish mortise of 7/8" x 8-1/16" mortise using a standard 1/2" mortising bit and a standard 5/8" template guide. Template #2 will produce the 2-3/16" x 6-3/8" x 1/4" deep door face prep using the standard 1/2" mortising bit and a 5/8" template guide. Template sets the centerline of the 1-1/2" cylinder hole at 2-3/16" from the door edge. Template #3 will produce the finish mortise for the strike on the door jamb; finish size is 13/16" x 3-9/16" again using the standard template guide and router bit. Note: Emtek offers an option for a 7/8" x 8-1/16" strike for this hardware; if you need this particular finish size please make a note in the comments section at checkout that you need the optional size of 7/8" x 8-1/16" in place of the one supplied in this set and we will make the exchange at no additional cost.